 


**Read this manual carefully before the first use.**

For your safety and benefits, please read the manual carefully. We'll NOT take any responsibility if you don't follow our instructions or cautions which result in damage or other loss. Thank you for buying and using our product.

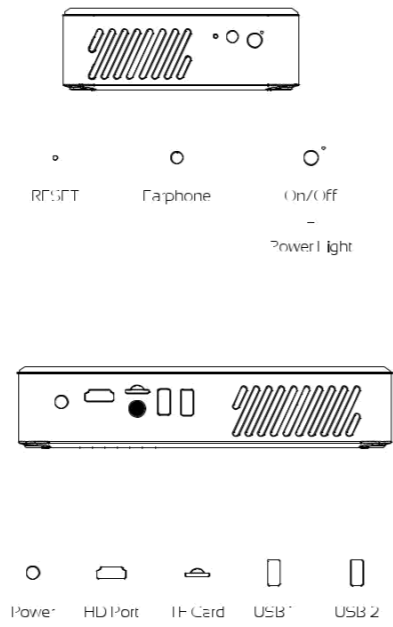

 
Manufacturer reserves the right of final interpretation



- Power
- Input
- Menu
- Home
- Back
- Enter
- Volume+
- Mute
- Focus+
- Volume-
- Focus-

**How to turn on/off projector**

- Connect power adaptor to the projector, power light on, remove lens cover.
- Press On/Off button for more than 3 sec to turn on the projector
- Press On/Off button twice to turn off the projector

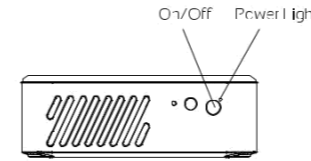


**Status of Power Off**



Lens Cover

 **Status of Power On**



Caution: Make sure lens cover is open during projection!


**Adjust Focus by Remote**



 Press Focus button (F1/F2) to adjust the image to be clear.

**Battery of Remote Control**

Replace new battery when its power is in low or used up.

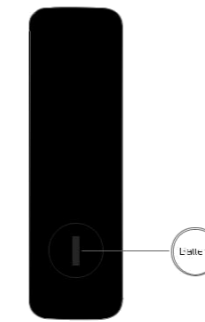

**How to use the projector**

Select the input source. Turn on the device(PC, laptop, DVD, etc), connect to the projector via HDMI cable, press "Input" button and select "1/2".



**Pair your devices to projector via Bluetooth:**

Turn on the projector and your bluetooth speaker, select "Setting" and enable Bluetooth function, then search and pair with the projector to play music. Caution: The clearance between projector and speaker is no more than 10m.

 


**Homepage of the projector:**

You'll find the homepage once turn on the projector, it includes 6 categories: Entertainment, Mobile Office, Productivity, App Store, My Apps, Settings. In the meantime, you can edit the shortcuts at the bottom of the homepage.



WiFi Pre-installed APPs office for Word, Excel, PPT files, portable, easy and stable. Built-in high-capacity battery, keep away from power cord, last for 1.5 hours with less waiting.

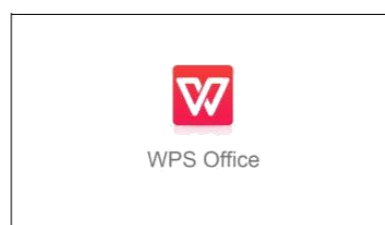

entertainment Various of Apps, choose whatever you like.



Shortcuts Add and remove apps whenever you want.




**My Apps**



 **Settings**

Turn on the projector and select "Settings". It includes 7 categories: WiFi, Network, Device, Personal and System.

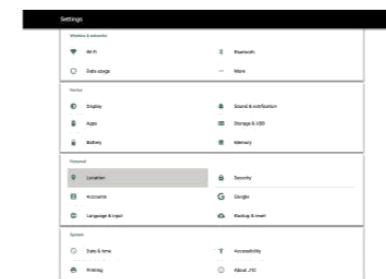

**OSD Menu Settings:**

Turn on the projector and press "Menu" to find OSD settings. It includes: language, Input, Image Mode, Audio, Video, Color, Aspect, Resize, Keystone (X) within "Reset Status" and Software Update(OSD). You can adjust them according to your requirements.



**Safety Instructions**

The all inlet/outlet/lens should be well ventilated when projector is working. In a confined space, fire explosions or other serious accidents may occur. Do not put any hazards into the accessories. Do not touch the lens. For more details, please contact with professional person for assistance.

**Do not use projector at below situation:**

Wet, dusty, smoky places, or it may pollute optical elements, result in the projector lens will be dirty. Keep minimum 100 mm space around the appliance for optimal ventilation. The places where temperature is above 35°C. The places which altitude is more than 3000 meters.

